

| Maker | Series | Model | Tip No. |
|--------|---------------|--|---------|
| Acer | Travelmate | 310,311,312,313,314Series,310T,311T,312T,313T,314T,330,332,333Series,330T,332T,333T | 2 |
| Acer | TI Extensa | 700Series,700T,710,711,712Series,710DX,710T,710TE,711TE,712TE | 1 |
| Acer | Travelmate | 200Series,200DX,200T,201,201T,202,202T,210,210T,210TER,210TXF,211,211T,212,212T,212TE,212TXV,213,213T,213TX,213TXV,220,222Series,222X Series,260,261,261XC,261XV, 290, 350,351,352,353,354Series,350TE,350TE-N,351TE,351TEV,352TE,353TE,353TEV,354TE,354TEV,360,361,364Series,361EVi,364ECi,365,510,512,513,514,515,516,517,512DX,512T,512TE,512T-64,513DX,513T,514T,514TXV,515TE,516TE,517TE,600Series,602,603,604,600TER,602TER,603TER,610,611,612,613,614Series,610TXC,610TXV,610TXi,611TXC,611TXCi,611TXV,612TXC,612TXCi,612TXV,613TXC,613TXCi,614TXV,614TXV,620,621,623Series,621LV,621XC,621XV,623LC,623LCi,630,632,633,630XV,630XCi,632XCi,633LCi,660,720,722,723Series,720TX,720TXV,721TX,722iTX,722iTXV,722TX,723TX,723TXV,730,732,734,735Series,730T,730TX,730TXV,732TLV,732TX,732TXV,734TL,734TXV,735TLV,736,737,738,739Series,736TL,736TLV,737TLV,738TLV,739GTLV,739TLV,740,741,744,740LVF,741LVF,744LCF | 1 |
| Acer | TI & AcerNote | 300Series,350,350C,350P,350PC,352,355,356,358Series,361Series,370Series,LifeNote373,Light350,Light350P,Light350C,Light350PC,Light356,Light358,Light370,Light371,Light372,Light373,Light374,Light380,Light382 | 3 |
| Acer | TI Extensa | 350,355Series,360,365,366,367,368Series,366D,367D,367T,368D,390,391C,391T,392C,392T,393C,393T,394T,395T,500,501,502,503,505Series,500DX,501DX,501T,502DX,502T,503T,505DX,550Series,600Series,605,610,615,650,670 | 3 |
| Acer | Travelmate | 340Series,341,342,343Series,340T,341TV,342T,343TV,345,347Series,345T,347T,505,506,507,508Series,505DX,506DX,506T,507DX,507T,508T,520,521,524,520i,521TE,521TEV,521TXV,524TE,524TXV,525TE,525TX,525TXV,527TXV,528TE,529ATXV,529TX,529TXV | 3 |
| Acer | | Aspire 1400 | 5 |
| Apple | | PowerBook (G3), iBook:iBook , iBook(3400, 2400, 14000) | 83 |
| Apple | | Titanium G4, iBooks | 84 |
| Apple | Powerbook | G4 | 84 |
| AST | Ascentia | A & P series | 7 |
| ASUS | | L8400 | 11 |
| BenQ | | Joybook 3000 series, 3000M-T28, 3000M-XXX | 5 |
| CANNON | Innova | 300 series, 400 series | 5 |
| Compaq | Armada | 100, 1100, 1120, 1125, 1130, 4100, 4120, 4130, 4131, 4220, 400-430 Series | 2 |
| Compaq | LTE | 5000, 5150, 5200, 5250, 5300, 5380, 5400, 5480, 6000 | 2 |
| Compaq | Presario | 700,710,715,800,1010, 1020, 1030, 1060, 1065, 1070, 1075, 1080,1200, 1210, 1215,1216, 1220, 1232, 1235, 1236, 1237, 1240, 1244, 1245, 1247, 1250, 1255, 1260, 1266, 1267, 1272, 1273, 1274, 1275, 1277, 1278, 1279, 12XL series, 1450, 14XL series, 1600i, 1600 series, 1610, 1611, 1622, 1625, 1626, 1645, 1655, 1670, 1680, 1681, 1682, 1685, 1687, 1688, 1690, 1692, 1693, 1694, 1700 series, 17XL265, 17XL275, 17XL360, 17XL362, 17XL365, 17XL375, 17XL460, 17XL465, 17XL475, 17XL570, 18XL, 1800 series, 1800t series, 1810, 1825, 1830, 700, 1200, 1400, 2700, 2710 | 5 |
| Compaq | Armada | 110,E500, M300, M700, V300 series , E700, E500, Evo N400c, 600 Series, M-series | 11 |
| Compaq | Prosignia | 170, 190, 300, 305 | 11 |
| Compaq | Evo | N105, N115, N160, N180 | 5 |
| Dell | Inspiron | 3000, 3200, 3500, 7000 | 5 |
| Dell | Latitude | 450MC Series | 5 |
| Dell | Inspiron | 3500, 7000 Series | 5 |
| Dell | Latitude | XP Series : 100cx, 450c, 450x, 475c, 475D, 4100c, 4100D, 4100T | 7 |
| Dell | Inspiron | 2500, 2600, 3700, 3800, 4000, 4100 Series, 5000, 7500, 8000, 8100, X200, 3650, 8200, M50, 5000e | 88 |
| Dell | Latitude | C400, C500, C600, C610, C800, C810 Series, C840, C-Series CP, CPI, and CS, M40 workstation, CPI 366XT, CPI A400XT, CPI 300ST, CPI 300XT, CPt, CPx, H500GT, CS/CSx Series, LSH 400ST | 88 |
| Dell | Latitude | L400, L600, L800, LS Series | 87 |

| Maker | Series | Model | Tip No. |
|-----------------|-------------|--|---------|
| Dell | Inspiron | 2000, 2100 | 87 |
| Dell | Latitude | LT | 12 |
| Digital | | HINOTE 700VP SERIES, ERA-1000 | 5 |
| Fujitsu | A Series | A4170 | 6 |
| Fujitsu | B Series | B112, B142, B2130, B2131, B2175, B2160 | 6 |
| Fujitsu | C Series | C340, C350, C352, C360, C4120, C4235, C5130, C5235, C6320, C6330, C6525, C6535, C6547, C6556 C657, C2010, C25, C4000 Series, C6000 Series, C7651 | 6 |
| Fujitsu | E Series | E330, E340, E342, E350, E351, E360, E362, E370, E380, E6540, E6556, E6570, E Series | 6 |
| Fujitsu | L Series | L440, L470 | 6 |
| Fujitsu | Lifebook | 200 Series : 270Dx, 280Dx 400 Series : 420Dx, 435Dx 500 Series : 531T, 535T, 555Tx, 565Tx, 585Tx, 600 Series : 635T, 635Tx, 655Tx, 656Tx, 675Tx, 690Tx, 700 Series : 735Dx, 755Tx, 756Dx, 765Tx, 770Tx, 790Tx, 900 Series : 985Tx, 990Tx2, 3700X, i4100 Series, P2040, P2110 | 6 |
| Fujitsu | S Series | S4510, S452, S-4542, S5582, S6010 | 6 |
| Fujitsu | Amilo | D series, Pro V series | 5 |
| Fujitsu | | Milan, Monte Carlo, Montegro, PenCentra 130, PenCentra 200, Point 1600, Point 510, Stylistic | 6 |
| Fujitsu | Celsius | Mobile H | 3 |
| Hewlett Packard | Omnibook | 500 Series, 900, 2100 Series, 2103, 2105, 3000 series, 3100 series, 3101, 4100 series, 4101, 4103, 4105, 4150, 6000 series, 7100 series, 7103, 7150 series, XE series, XE2 series, XE3 series | 5 |
| Hewlett Packard | Pavilion | N3100 Series, N3110, N3150, N3190, N3200 series, N3210, N3215, N3220, N3250, N3270, N3290, N3295, N3300 series, N3310, N3330, N3350, N3370, N3390, N5000, N5100, N5130, N5270, N5350 Series, XH156, XZ815, ZE1110, ZT1070, ZT1130, ZT1170, ZT1180, ZE, ZT, ZU series, ZE5100, XT345, XZ355, XZ375, XE4000series, ZD70XX Series | 5 |
| HITACHI | Vision Book | E & MX Series, Pro, Elite, Plus | 5 |
| HITACHI | Flora Prius | 210, 220N | 4 |
| HITACHI | Flora Prius | 20L | 7 |
| IBM | ThinkPad | 240, 240X, 290, 355, 360, 365, 365XD, 380, 380D, 380E, 380ED, 380XD, 380Z, 385, 385D, 385ED, 385XD, 390, 390E, 390X, 560, 560E, 560X, 560Z, 570, 600, 600E, 600X, 700, 701, 720, 750, 770, 770E, 770ED, 770X, 770Z, 755CV, 760, 760CD, 760EL P120, 760EL P133, 760XL P166, 765 | 4 |
| IBM | A Series | A Series, A20, A21, A30, R Series, R30, T20 2647, T21, X20, X21, 240, 290, 365, 380, 385, 390, 560, 570, 600, 701, 770 | 4 |
| IBM | "i" Series | i1420 (2621-xxx), 1460 (2621-xxx), i1480 (2621-xxx), i1500 (2621-xxx), i1720, i1721 1200, 1210, 1230, 1250, 1260, 1300, 1330, 1420, 1460 | 4 |
| IBM | ThinkPad | 310, 310D, 310E, 310ED | 3 |
| IBM | "i" Series | i1410(2611-xxx), i1411(2611-xxx), i1412(2611-xxx), i1434(2611-xxx), i1435(2611-xxx), i1435(2611-xxx), i1436(2611-xxx), i1450(2611-xxx), i1451(2611-xxx), i1452(2611-xxx), i1470(2611-xxx), i1471(2611-xxx), i1472(2611-xxx), i1500(2611-xxx), 1441, 1472 | 3 |
| IBM | ThinkPad | 235, 240, 290, 365, 380, 385, 390, 535, 560, 570, 600, 701, 770 A, T, X & R Series, T20, T30, T40 | 4 |
| IBM | ThinkPad | 600X Series, 2645, 2611 | 5 |
| IBM | ThinkPad | 730T, 350Series, 500, 510 Series | 8 |
| NEC | | Versa 550 Series, Ready 220T, 330T, 340T, 360T Series | 5 |
| NEC | | 120T Series | 2 |
| Packard Bell | | K5305 Easynote | 5 |
| Panasonic | Toughbook | CF01+, CF37, CF01+, CF17+, CF25+, CF27+, CF33+, CF34+, CF35+, CF37+, CF45+, CF47+, CF48+, CF61+, CF62+, CF71+, CF48, CF72, CF63, CF72+, M34, V25, V41, 170, 25, 270, 35, 370, 380 | 6 |

| Maker | Series | Model | Tip No. |
|-------------------|---------------|--|---------|
| PHILLIPS | | F76000 | 3 |
| PHILLIPS | | NB470, NB570, Travelmate 570 | 5 |
| SAMSUNG | | Pro sens 500, 525 series, 810 | 7 |
| Sharp | Actius | A110, A150, A250, A280, A290 | 12 |
| Sharp | PC | 3000 series, 8000 series, 9000 series, PC9340T | 5 |
| Sony | VAIO | PCG-505F, PCG505FX, PCG505G, PCG-505GX, PCG-505TR, PCG-505TX, PCG-SR5K, PCG-SR7K, PCG-C1X, GR, SR, SRX, VX Series, Vaio 505, PCG GR414SP, PCG Z 1 RMP, PCG V-505 AP | 6 |
| Sony | VAIO | PCG-700 series, PCG-705, PCG-707, PCG-717, PCG-719, PCG-729, PCG-731, PCG-735, PCG-748, PCG+Z505, PCG-Z505HE, PCG-Z505HS, PCG-Z505HSK, PCG-Z505JE, PCG-Z505JEK, PCG-Z505JS, PCG-Z505JSK, PCG-Z505, PCG-Z505LE, PCG-Z505LEK, PCG-Z505LS, PCG-Z505LSK, PCG-Z505R, PCG-Z505RX, PCG-Z505S, PCGZ505SX, PCG-800 series, PCG-808, PCG-812, PCG-818, PCG-838, PCG-F150, PCG-F160, PCG-F180, PCG-F190, PCG-F250, PCG-F270, PCG-F280, PCG-F290, PCG-F340, PCG-F350, PCG-F360, PCG-F370, PCG-F390, PCG-F403, PCG-F409, PCG-F420, PGC-F430, PGC-F450, PGC-F480, PGC-F480, PGC-F490, PGC-F520, PGC-F540, PGC-F560, PGC-F590, PGC-F630, PGC-F650, PGC-F660, PGC-F670, PGC-F680, PGC-F690, PGC-F807, PGC-F801A, PGC-F480K, PGC-F490K, PGC-F540K, PGC-F560K, PGC-F580K, PGC-F590K, PGC-F400LT, PGC-FX103, PGC-FX120, PGC-FX170, PGC-FX190, PGC-FX200, PGC-FX270, PGC-FX800, PGC-FX105K, PGC-FX109K, PGC-FX770K, PGC-FX880K, PGC-FXA32, PGC-FXA33, PGC-FXA36, PCG-XG Series, PCG-XG18, PCG-XG19, PCG-XG28-, PCG-XG28K, PCG-XG29, PCG-XG9, PCG-XG Series, Vaio 808/812/818/838, PCG-Z505, Z600, R600, QRSeries, PCG-430 a 490, PCG-705 a 748C, PCG-F & FX & XG Series, PCG | 7 |
| Sony | VAIO | PCG-C1X, PCG-C1VN, PCG-C1XS, PCG-N505VE, PCG-N505VX | 6 |
| Texas Instruments | Extensa | 350 Series, 365 Series, 390 Series, 550 Series, 560 Series, 570 Series, 900 Series | 5 |
| Toshiba | Satellite | T1850, T1900, T1900/CS, 1910, 1950, 1960, T2400,2400, T3400, 3600, T4500, T4600, 4600, T4700, 4700, T4800,4800, T4850, T4900, 4900 | 2 |
| Toshiba | Libretto | 20CT, 30CT, 50CT, 60CT, 70CT | 8 |
| Toshiba | Portege | 300, 320, 610, 620, 650, 660, 4000, 4005, 7000, 7010, 7020, 7030, 7140, 7200, 7220, 7220Cte, 7030, 2000 | 8 |
| Toshiba | Satellite | 210CS, 220, 225, 230CX, 305, 315, 320, 325, 330, 335, 1555, 1615, 1800, 1805, 2060, 2065, 2095, 2100, 2105, 2140, 2180, 2210, 2250, 2505, 2515, 2520, 2525, 2540, 2545, 2590, 2595, 2610, 2615, 2655, 2675, 2715, 2755, 2775, 2800, 2805, 2800T, 4000, 4005, 4010, 4015, 4020, 4025, 4030, 4060, 4070, 4080, 4090, 4100, 4320, 4340, 4360, 4600, 5005, 5105, 2400/2405, 1400, 1405, 1410, 1415, 2410, 2415, 5005, 5105, A10, A15, M20 | 8 |
| Toshiba | Satellite Pro | 400, 405, 410, 415, 420, 425, 430, 435, 440, 445, 460, 465, 470, 480, 490, 490X, 4220, 4260, 4280, 4300, 4600, T200, CDX, CDS, 6000, 6100, M10, M15, TE2000 | 8 |
| Toshiba | Tecra | 500, 510CDT, 520, 520CDT, 530, 550, 700, 710, 720, 720CDT, 730, 730X, 740, 750, 780, 8000, 8100, 9000, 9100, A1, M1, S1 | 8 |
| Toshiba | Satellite | T1850, 1900, 1910, 1950, 1960, 2400, T3400, 3600, 4500, 4600, 4700, 4800, 4900 | 2 |
| Toshiba | Satellite | 1000, 1005, 1605, 1625, 1675, 1695, 1715, 1715 XCDS, 1730 Series, 1735 Series, 1750 Series, 1755 Series, 3000, 3005 | 5 |
| Toshiba | Libretto | 100, 110 | 85 |
| Toshiba | Libretto | 50, 70 | 8 |
| Toshiba | Portege | 2000, 3010, 3015, 3020, 3025, 3110, 3120, 3440, 3480, 3490, 4000, 4005 | 85 |
| Toshiba | | TE2100 | 8 |
| Winbook | Winbook | FX, XP5 Pro | 3 |
| Winbook | Winbook | Jl, Si, Si2, XI, XP, XP5, Zl, Si Series, Z Series, X Series, J Series (All Model), J4 Series | 5 |
| Winbook | Winbook | Xli, XL, XL2, XL3 | 1 |